


Display Control Instruction

Press "Menu" to enter into menu to selection mode, then button "Enter" key 5 minutes after, enter into white balance adjust menu (BALA). Display board show strobe status, Then button "Enter" one more again to enter into White balance adjustment, RED(0-255), GREE(0-255), BLUK (0-255)

ADDR	DMX Address	A001-A512
CHND	Channel Mode	11CH
SLND	Master/Slave	MAST SL1 SL2
SENS	Sound Sensitivity	0-100
NODE	Auto/Sound	YES NO
STBY	Boot Pause Mode	YES NO
PAN	X motor forward/reverse	NO/YES
TILT	Y motor forward/reverse	NO/YES
LED	Digital display On/Off	ON/OFF
DISP	DISP/DSIP	ON/OFF
TEST	Function self-checking	
HOUR	Machine time record	
RSET	Reset self-checking	

LED BEAM MOVING HEAD 3W*18 User's Manual

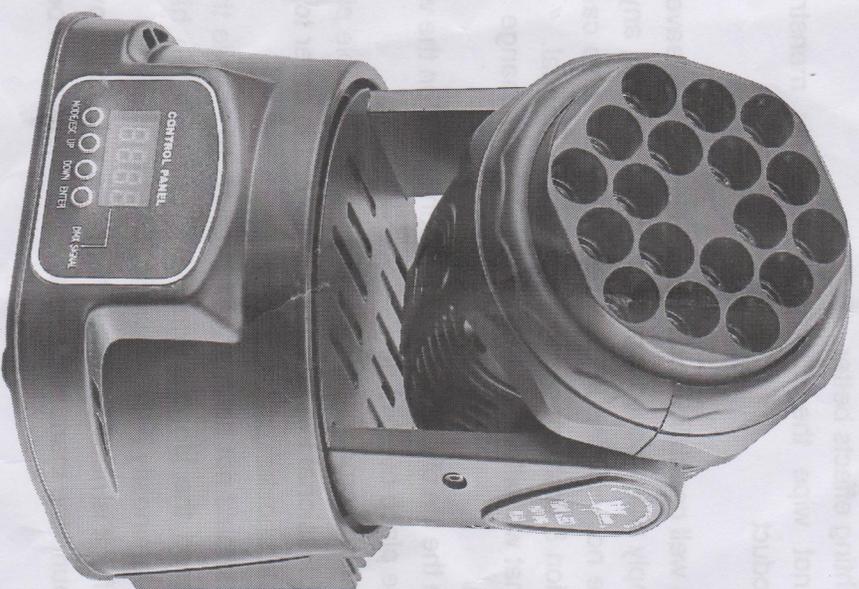

QF-1007C

Please use the product before carefully read the product description save product brochures

Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better
4. Please do not wipe the crust using organic menstrum for avoid to damaged the product

Statement

The product has well capability and intact packing when leave factory. All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change.

Attention Item

1. For guarantee the life of product, please don't put it on the wet place and also not use it in the place over 40 degree.
2. Please don't lay the product on the unfixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over +/- 10% while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low
5. After power off, if it is need used again, please cool down over 20 minutes.
6. Please look round the manual for ensure the product can be used normally.

Product Introduction

- Power Supply AC90-230V, 50Hz-60Hz
- Power consumption: 60W
- Fixing lamp: LED 18*3W RGB
- DMX-Control-channels: 6/11, select from control board
- Color: RGBW Color-mixture
- Shuttler: Flash rate: 0-10Hz
- Dimmer: 0-100% mechanic dimmer
- Maximum PAN-movement: 540°
- Maximum TILT-movement: 270°
- Master/Slave activated by sound at pre-programmed function

DMX Channel Summary- 6Channels Mode

CHANNEL	VALUE	FUNCTION
1	0~255	Adjust Pan X motor movement
2	0~255	Adjust Tilt Y motor movement
3	0~10	Close
	11~255	Dimmer+Strobe
4	0~255	Red color adjustment from dark to bright
5	0~255	Green color adjustment from dark to bright
6	0~255	Blue color adjustment from dark to bright

DMX Channel Summary- 11 Channels Mode

CHANNEL	VALUE	FUNCTION
1	0	Stop
	1~255	Adjust Pan X motor movement
2	0	Stop
	1~255	Adjust Pan X motor fine
3	0	Stop
	1~255	Adjust Tilt Y motor movement
4	0	Stop
	1~255	Adjust Tilt Y motor fine
5	0~10	Close
	11~255	All dimming adjustment from dark to bright
6	0	Close
	1~255	Red color adjustment from dark to bright
7	0	Close
	1~255	Green color adjustment from dark to bright
8	0	Close
	1~255	Blue color adjustment from dark to bright
9	0~9	Close
	10~255	Adjust 32 mixed color
10	0~9	No strobe
	10~255	Adjust strobe from slow to fast
11	0~127	Close sound active
	128~255	Open sound active