

11CH

ch	FUNCTION	Instroduction
1	X	0-255
2	X Fine	0-255
3	Y	0-255
4	Y Fine	0-255
5	Color	
	0-139	Choose Color
	140-255	Automatic color-changing Fast to slow
6	GOBO	
	0-63	Fixed GOBO
	64-127	GOBO Shake
	128-255	Automatic GOBO-changing Fast to slow
7	Strobe	0-255
8	DIMMER	0-255
9	X	0-255
10	Auto Mode	
	0-59	Other
	60-84	Auto3
	85-109	Auto2
	110-134	Auto1
	135-159	Auto0
	160-184	Sound3
	185-209	Sound2
	210-234	Sound1
	235-255	Sound0
11	Reset	250-255 (5s)

Note: Take out 512DMX cable, wait for 30S ,
then cut off the power of the light, the light will save the last DMX signal for the

Fine Note: when the adress ON.A001 press the 4TH button for 10s Then will show the following Menu

H000-255	X Step motor offset data
Y000-255	Y Step motor offset data
C000-255	color chips motor offset data
G000-255	Gobo motor offset data
DEFR	The Above dates become factory settings

Then press the 4th button 10s will be saved.